



# START-UP SHEET

QUESTIONS: CUSTOMER SERVICE TOLL FREE AT  
**1-800-771-1810**

## KING EL SMASHO


**You must power up your King FIRST!  
THEN power up your Knights!**

**1 USE BRAND NEW ALKALINE BATTERIES** INSERT 4 AA ALKALINE BATTERIES IN ROBOT. INSERT 3AAA ALKALINE BATTERIES IN REMOTE.

**2 TURN ROBOT ON!** BUT DON'T TOUCH REMOTE UNTIL ALL POWER CARDS HAVE BEEN SWIPE!



**3 SWIPE CARDS AS SHOWN!**

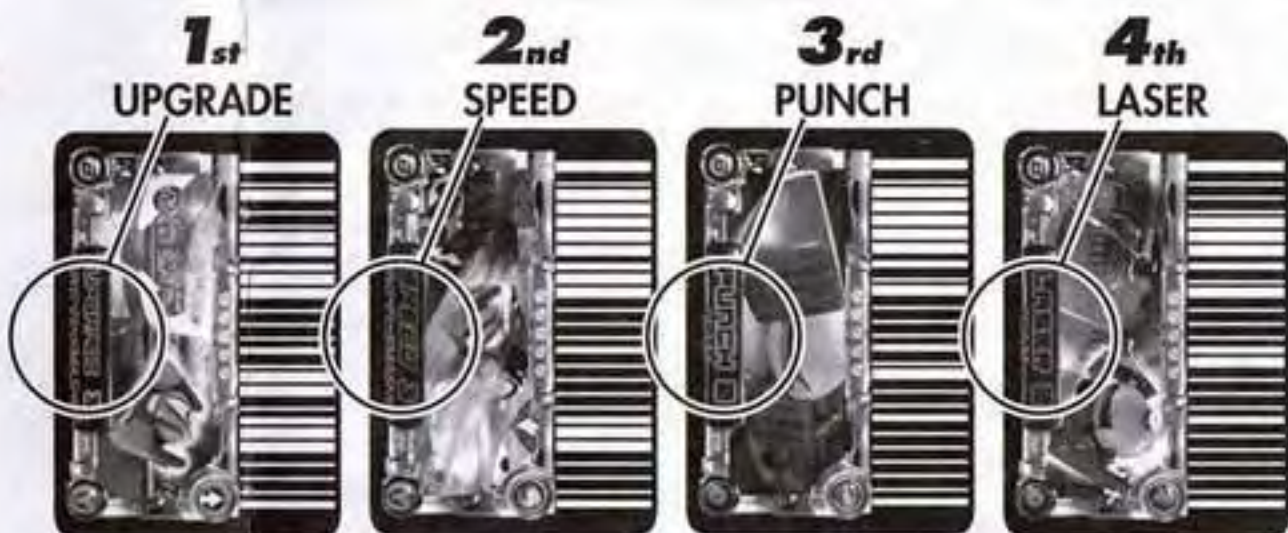

**3A ALWAYS SWIPE FROM RIGHT TO LEFT WITH BARCODE INSIDE ROBOT.**

1. Swipe Upgrade Level 3 card and listen for robot's response
  - Good Swipe: Robot will make a chime sound
  - Bad Swipe: Robot will make a buzzer sound and say "No good! Swipe again!"
2. Swipe Speed card and listen for robot's response (same as Upgrade)
3. Swipe Punch card and listen for robot's response (same as Upgrade)
4. swipe Laser card and listen for robot's response (same as Upgrade)




DO NOT wrinkle or bend cards

After the 4th card has been swiped correctly, the robot's lights will go on and he will make a guitar strumming sound effect. NOW you're ready to arm your Knights or battle solo!

**DIDN'T WORK?**

- Swipe cards from RIGHT to LEFT in a smooth, STRAIGHT LINE!
- Try swiping faster or slower. Practice to find the correct swipe speed for your robot
- Swipe cards in correct order.
- DO NOT wrinkle or bend the card when swiping.
- Make sure entire bar code is swiped through robot
- Make sure the remote button is not pushed accidentally.


**IF ROBOT STILL DOES NOT RECOGNIZE CARDS, TURN ROBOT OFF, THEN BACK ON AND START OVER.**

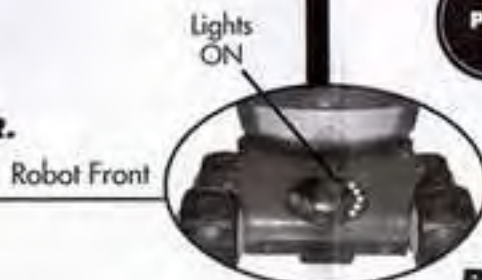

**4 BEAM POWER TO YOUR KNIGHTS!**

**STOP! IF YOU DON'T HAVE ANY KNIGHTS YET, SKIP THIS SECTION AND GO TO THE NEXT SECTION!**

1. Turn Knight on. He will say "Slammer on-line."
  2. Place Knight directly in front of King, so they are facing each other. (fig.A)
  3. Push button on King's head to beam commands to his Knight. King will say "Ready my troops for battle!"
  4. Knight will say "I obey, master!" when he correctly receives the King's commands.
  5. Now you can arrange your Knights into battle formation!
- Note: Be careful not to tip your Knight or hit the terminate switch when powering up your Knights.

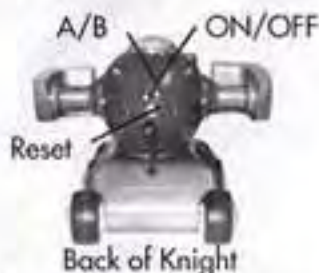

**DIDN'T WORK?**

- Make sure Knight is facing the King
- Make sure the remote button of the Knight is not pushed accidentally

**NOTE: KNIGHT MUST RECEIVE POWER BEAM IN ORDER TO OBEY THE KING'S CONTROLLER!**



See full instructions for more information.

**5 NOW GRAB REMOTE!**




**BATTLE WITH KING AND KNIGHTS:**

- NOTE: Do not tip your King or hit his terminate switch!
1. Set your Knight to channel A. If you have a second Knight, set him to channel B.
  2. To control your first Knight, hold down "A" button on King remote while pressing direction and laser buttons. Always aim directly at the first Knight. (fig.B)
  3. To control your second Knight, hold down "B" button on King remote while pressing direction and laser buttons. Always aim directly at second Knight.

**BATTLE WITH KING:**

- NOTE: Do not tip your Knight or hit his terminate switch!
1. Keep remote pointed at top of robot. (fig.C)
  2. Wake up remote by pushing punch button. Robot should now punch. If not, turn him off, then on and start again.
  3. Battle by pressing punch, laser and direction controls. To restart robot after a battle, turn robot off, then on and reswipe cards.

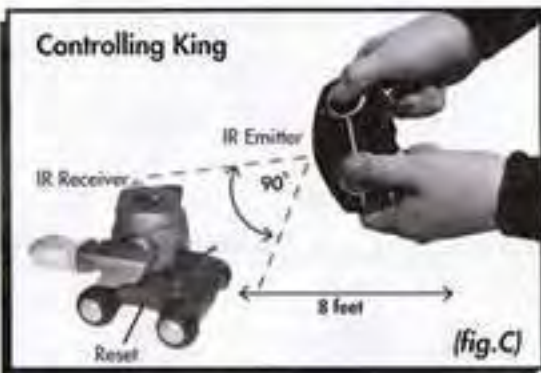

<b>TROUBLESHOOTING:</b>	
<b>ROBOT KEEPS DEACTIVATING</b>	Be careful not to tip robot or touch the terminate switch when powering him up! If deactivated, he will say, "Ooh, my circuits have been refried!" Turn robot off then on and repeat power up process.
<b>KING WON'T MOVE</b>	Robots are high-energy toys. It may be necessary to replace batteries after 1 hour of continuous play.
<b>ROBOT WON'T RECOGNIZE CARD</b>	Turn robot off, then on, or push reset on robot and reswipe all cards.
<b>REMOTE WON'T WORK</b>	For best results, operate remote within 8 feet of robot at all times and always aim at robot's head.
<b>KNIGHT WON'T RESPOND TO KING'S REMOTE</b>	<ul style="list-style-type: none"> <li>• Push and hold the A/B button that corresponds with the Knight's frequency setting, while pressing the direction and laser buttons.</li> <li>• The Knight may not have been beamed properly. Turn robot off, then on, or push reset on robot and start over.</li> </ul>
<b>INCONSISTENT RESPONSES WHEN BATTLING WITH ORIGINAL RUMBLE ROBOTS</b>	In order to be compatible with the Invasion series robots, the original Rumble Robots must be set to channel "A."

**READ YOUR RUMBLE ROBOTS INSTRUCTION BOOKLET FOR FULL INSTRUCTIONS!**

QUESTIONS: CUSTOMER SERVICE TOLL FREE AT  
M-F 9AM-5PM CST, OR E-MAIL THEM: **1-800-771-1810**  
customerservice@trendmasters.com  
OR VISIT OUR WEBSITE: www.rumblorobots.com