 
 


Fisher-Price **Kasey**
the
Kinderbot™
LEARNING SYSTEM

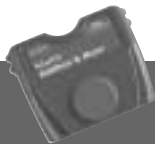

Math
Addition and More

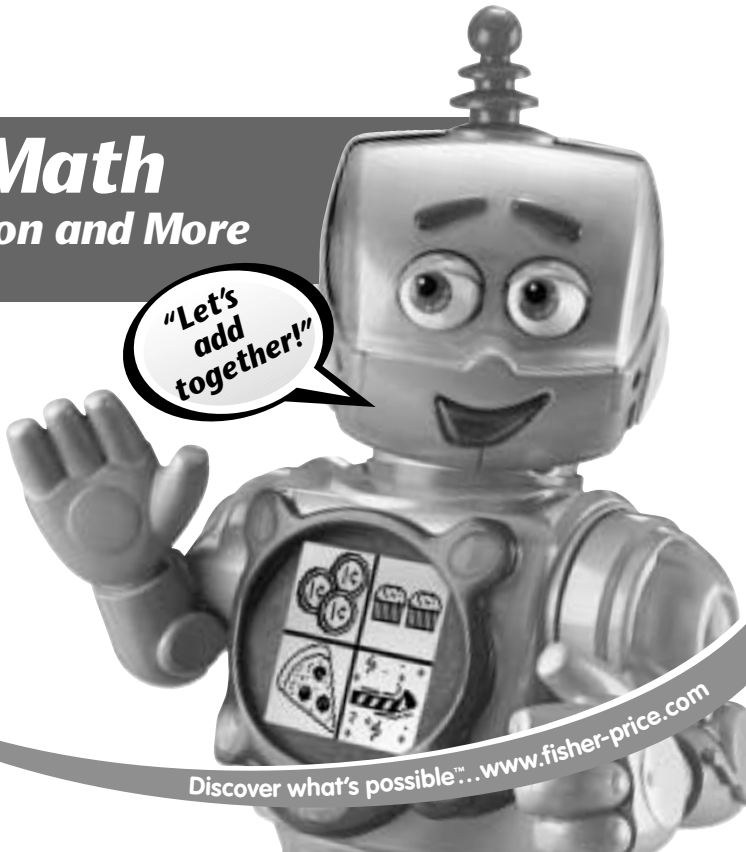

Discover what's possible... www.fisher-price.com

Getting Started

Please keep this manual for future reference, as it contains important information.

Before inserting the software cartridge, turn power off by pressing the On/Off button on the top of Kasey's foot. Insert the software cartridge into the software port and Kasey automatically turns back on!



Let's Plan a Math Party!

Choose a game or activity from the Main Menu: **Funny Money**, **Double Desserts**, **Pizza Plus**, and **Party Favors**. Touch a colored selection button to make your choice.

Buy Presents with Funny Money

Press the red selection button. Count the coins and decide which present you can buy.

Count by Two's at Double Desserts

Press the blue selection button. Pick a treat, sing with Kasey, and count by two's – all the way up to a dozen!



Add at Pizza Plus

Press the yellow selection button. Pick the toppings for your pizza and add them all up!

Subtract with Party Favors

 
Press the green selection button. Learn about subtraction as you give party favors away.

Home Button

Press the Home Button to return to the Main Menu at any time.




Buy Presents with Funny Money

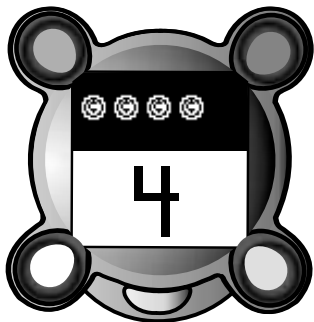


- First count the coins on the screen with Kasey!

 Red
Selection
Button

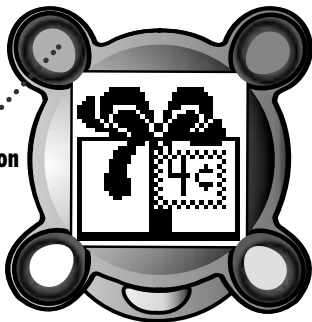


- Then listen as Kasey buys a present. Now, it's your turn.


Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



 Buy Presents with Funny Money

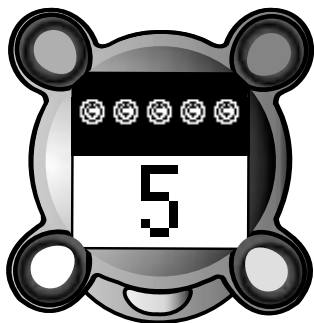

- Count the coins with Kasey.

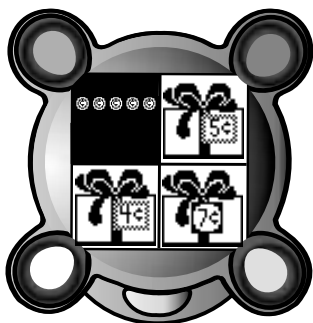 


- Press a selection button to pick a present that you can buy with the coins.






 Buy Presents with Funny Money

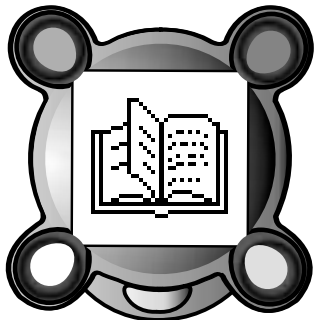

 - If you choose correctly, **“Give me five!”** Look at the present you bought.

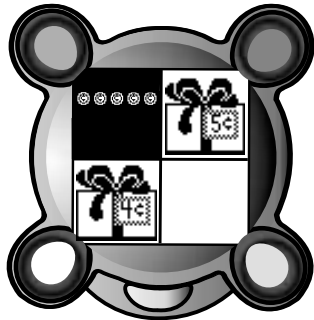


- If you choose incorrectly, Kasey tells you that you don't have enough coins. Try again!






 Buy Presents with Funny Money

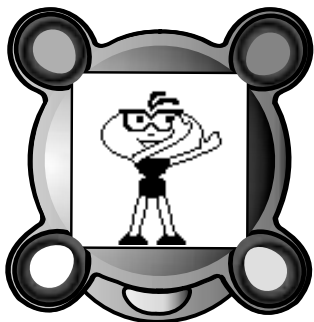


- It's time to sing along to a counting song with Kasey.

 Yellow
Selection
Button

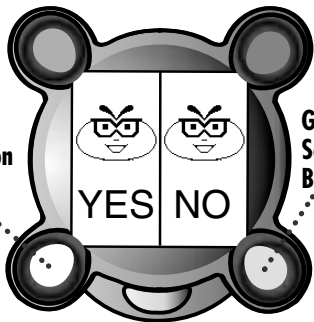


Green
Selection
Button

 - When the music is complete, you can play it again (press the yellow selection button for yes) or you can go back to the Main Menu (press the green selection button for no).

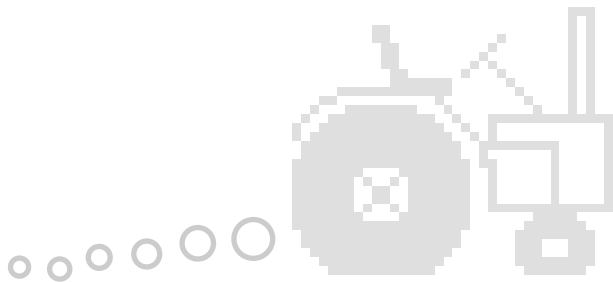





Count by Two's at Double Desserts

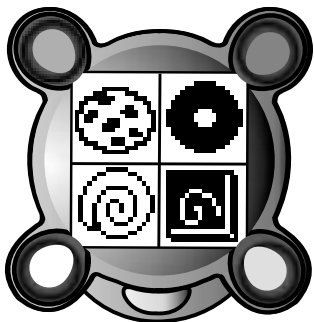 

 - Pick a treat to count. Press the selection button next to the treat.

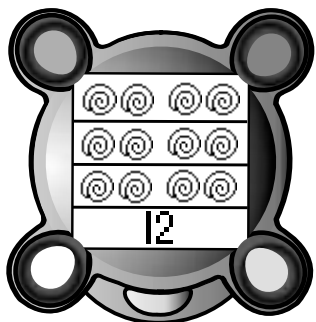


- Listen to Kasey count by two's all the way up to 12. Now, count together!


Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



 Count by Two's at Double Desserts

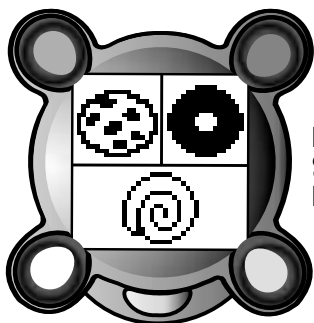

Red
Selection
Button

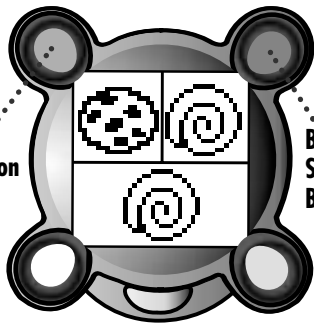 

Blue
Selection
Button

- Now it's time to match the treats and make a pair. Look at the treat on the bottom of the screen.
- When you see a matching treat in the upper left or right corner, press the red or blue selection button to choose it.



 


Count by Two's at Double Desserts



- It's time for a song!

Yellow
Selection
Button

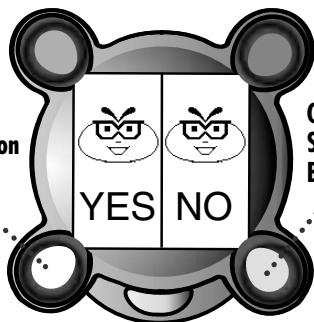


Green
Selection
Button


- When the music is complete, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).



  Add at Pizza Plus

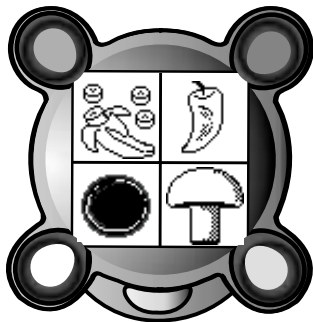


 
- Pick a topping for your pizza. Push a colored selection button to select it.

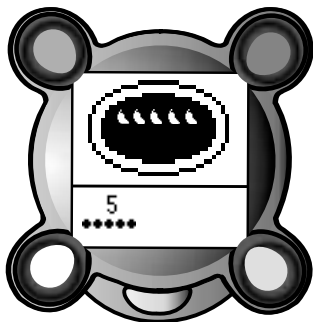


- Listen to Kasey tell you how many pieces of topping are on the pizza.

$$4 + 2 = 6$$


Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



 Add at Pizza Plus

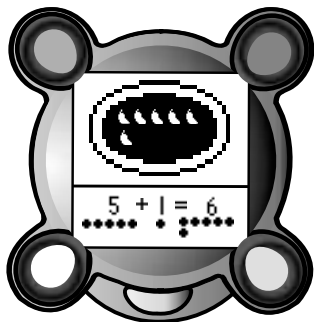

 
- Now, let's add more of the same topping. Listen to Kasey add and count the toppings. Now, it's your turn to add!

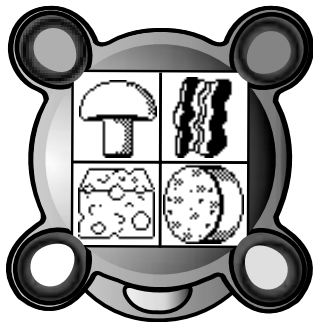


- Pick a topping for your pizza. Push a colored selection button to select.



 Add at Pizza Plus

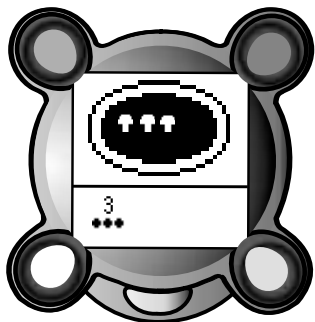

 - Listen to Kasey tell you how many pieces of topping are on the pizza.

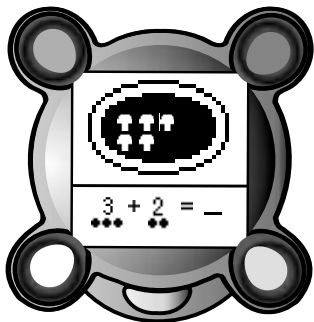


- Now let's add more topping.






 
Add at Pizza Plus

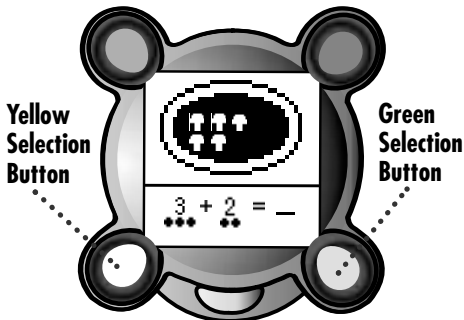

 
- How many pieces of topping are on the pizza?
Hint: Press the yellow or green selection button to repeat the question.

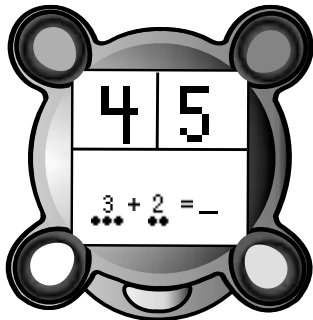

 
- Look at the numbers in the upper left and upper right corners. Press the colored selection button next to your answer.



Add at Pizza Plus

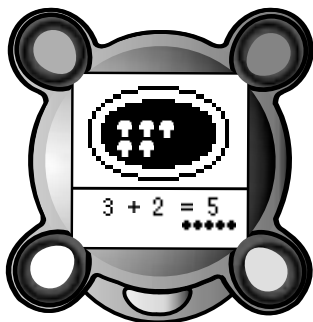 

Yellow
Selection
Button

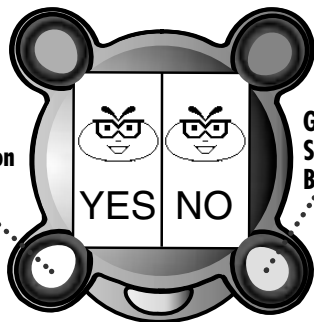 


Green
Selection
Button

- If you choose correctly, **“Yeah, you got it!”**
- If you choose incorrectly, Kasey tells you the correct answer. Try making another pizza.


- If you'd like to sing a fun song with Kasey, press the yellow selection button for yes or the green selection button for no.



 Subtract with Party Favors

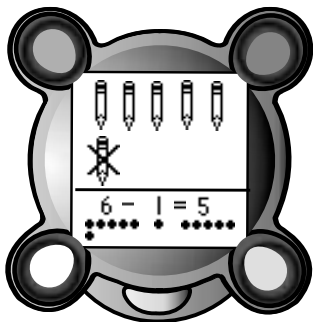

 
- Watch closely as Kasey shows you a subtraction problem with party favors. Now, it's your turn.

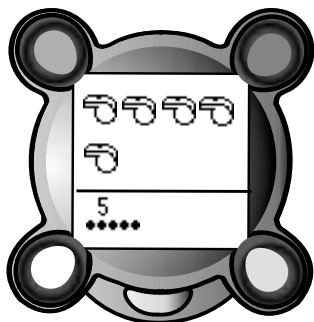


- Listen to Kasey tell you how many party favors there are.




Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



 Subtract with Party Favors


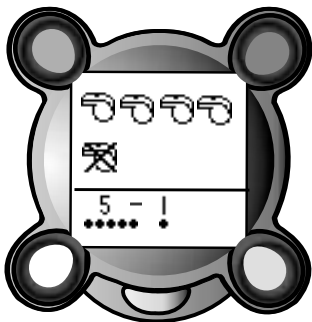


- Next, Kasey takes away party favors.

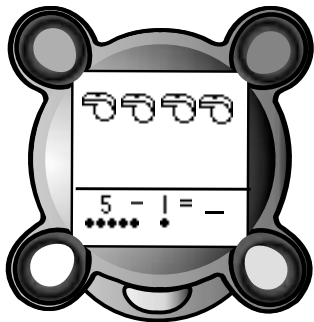 

- How many party favors are left?
Hint: Press the red or green selection button to repeat the question.

  Subtract with Party Favors

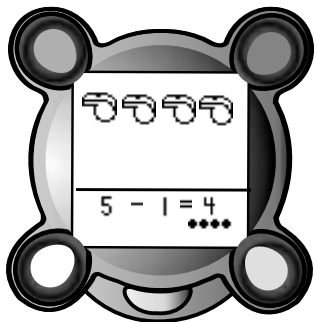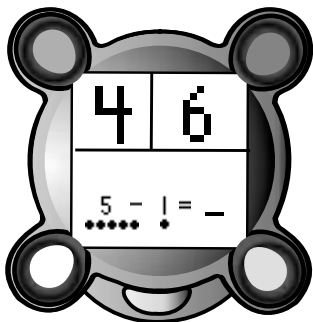


- Look at the numbers in the upper left and right corners. Press the colored selection button next to the answer to the question.

- If you choose correctly, **“That’s right!”**
- If you choose incorrectly, Kasey tells you the correct answer. Try subtracting again!






 Subtract with Party Favors

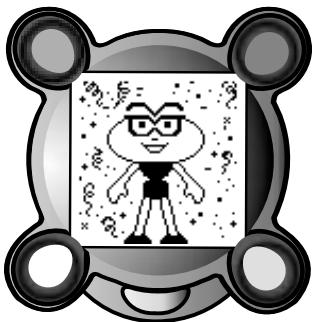

 - It's time to sing along to a song with Kasey.

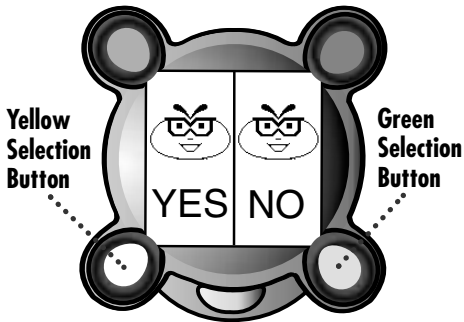

- When the music is complete, you can play it again (press the yellow selection button for yes) or you can go back to the Main Menu (press the green selection button for no).

Consumer Information

Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Kasey the Kinderbot™ Math Addition and More is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. **This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052

For countries outside the United States:

CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.